


MPT | DIGITAL SURVEILLANCE

TUTORIAL ON USING THE "BURN CD" FEATURE

Our DVR's feature a quick method of outputting video of an incident, and burning the resulting video clip onto a CDR disc.

Note the two buttons on the **DVR MAIN** screen that you will use :

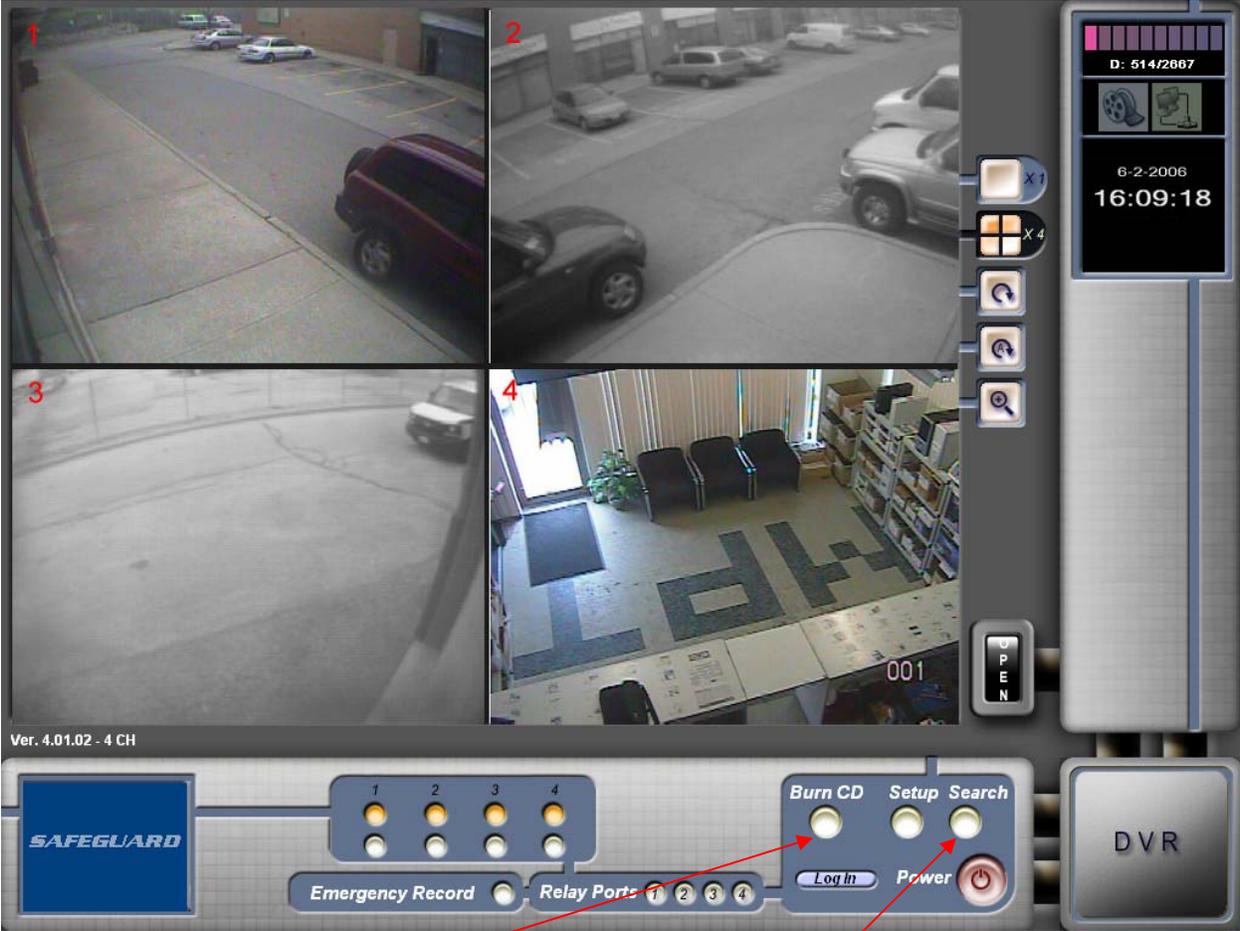

The **BURN CD** button


The **SEARCH** button

STEP 1 : FIND THE INCIDENT AND OUTPUT TO VIDEO

To find the video of the incident, you need to use the **SEARCH** feature. Click on the **SEARCH** button :




This screen will appear : (It may take a few moments to load, so be patient.)

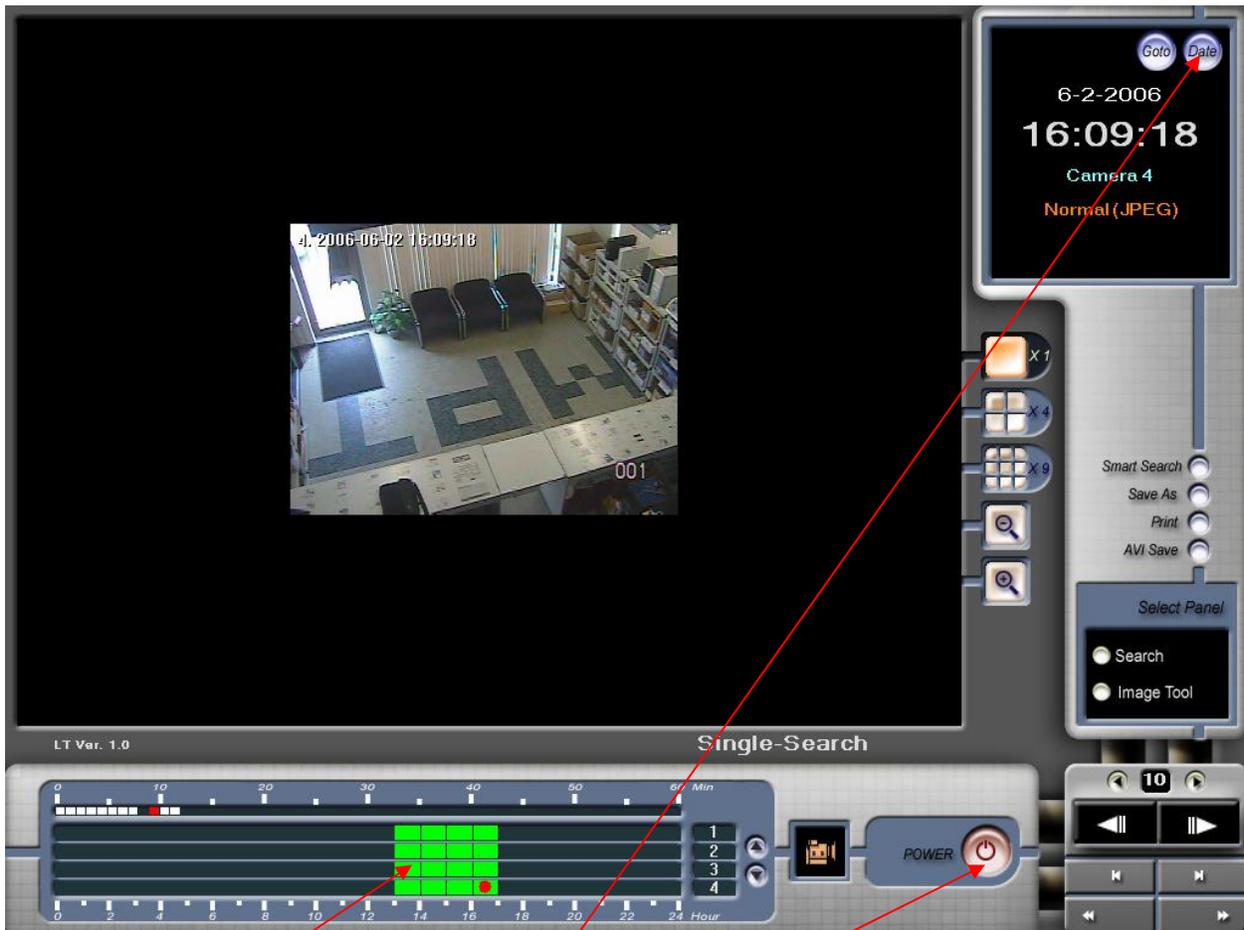


This area is the timeline

This button closes the **SEARCH** screen

This (**DATE**) button shows a calendar that allows you to search previous days

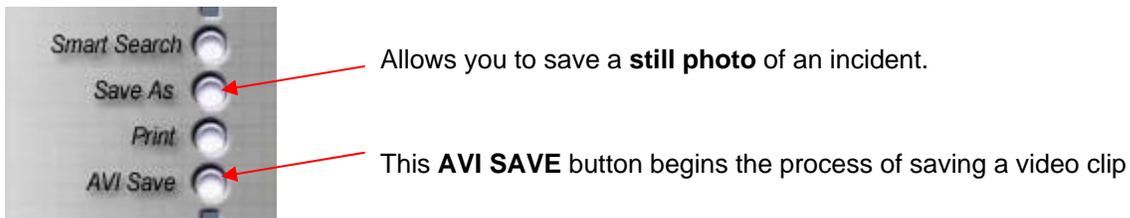

This box should pop up next, after clicking on **AVI SAVE** : (minus the red boxes.)

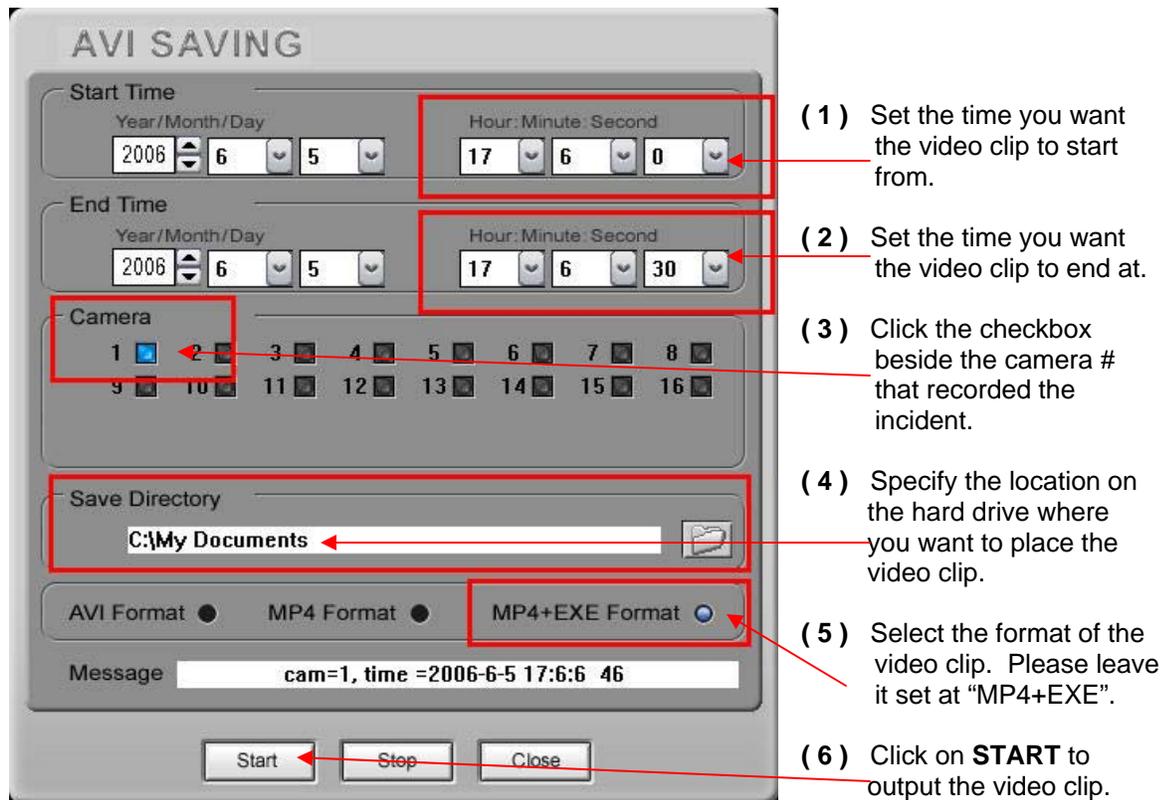

To go and view the clip you just outputted onto the DVR's hard drive, you must close the various **SEARCH** screens (either by using the **CLOSE** buttons, or the red **POWER** button on the main screen).

Click on the **START** button in Windows XP and then choose the **MY COMPUTER** icon. When the My Computer screen opens, click on " **RECOVERY (C:)** " and then " **MY DOCUMENTS** " (if that is the location you specified the file to be saved to.).

You should see a file in the My Documents folder now. In example given, the file name would then be :

“ CAM04 (2006_06_02 16_09_18 ~ 2006_06_02 16_10_18) “

Double-click on the file to open it and view the resulting footage that you just created. If the video shows the desired footage of the incident, then you are ready to burn that clip onto a CDR disc.

NOTE : If the **AVI SAVE** window (*as seen on page # 4*) appears different on your DVR unit, then you are likely using one of our older **JPEG** DVR machines and the AVI SAVE window looks slightly different. The JPEG units do not offer the chance to save in more than one format.

STEP 2 : BURN THE VIDEO CLIP ONTO A CDR DISC

You will need a blank CDR disc to put the incident footage onto. These discs can be purchased from most computer shops, STAPLES, or BEST BUY, and it's a good idea to keep at least 2 or 3 discs handy for emergencies.


Insert a blank CDR disc into the Writer drawer on the front of the DVR, and close the drawer. Moments later, a window may pop up and ask what you want to do with the disc. Just click on **CANCEL**.

If the **DVR MAIN** software isn't running (*the software that shows all the cameras on the screen as they record.*) then double click on the “ **DVR MAIN** “ icon on the Windows XP desktop, and the cameras will momentarily display.

Looking down at the bottom of the screen, you should see the “ **BURN CD** “ button :



Clicking on the button will then bring up the following screen :

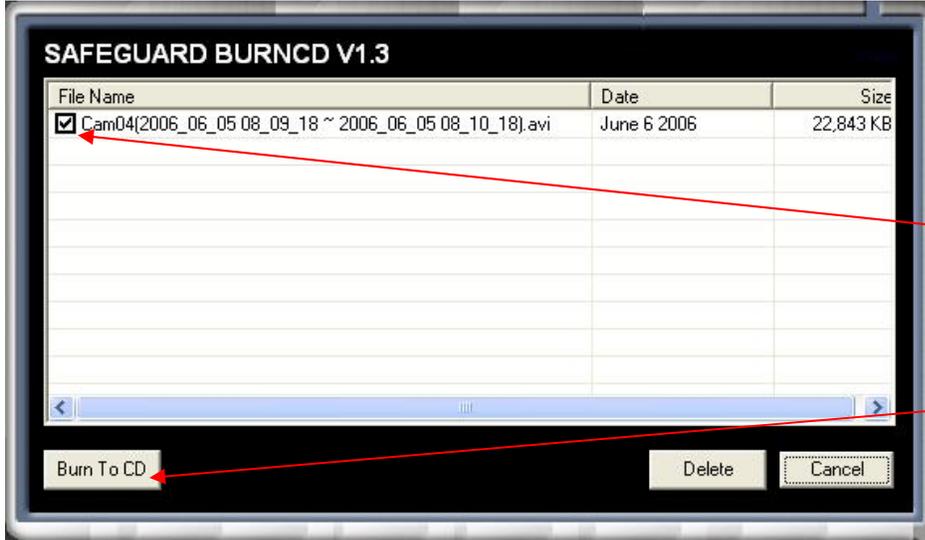

This is the video clip that was created. A checkmark should be beside the name.

This starts the process of burning the video onto CDR.

When you click on the “ **BURN TO CD** “ button, another window will appear and ask what name you wish to give the CDR disc. Type in a name that might relate to the incident on the video clip. Click **NEXT**.



When the process ends, it will indicate the burn has completed. You can click **FINISH** and remove the CDR disc from the drawer of the Writer.